

Core Disc Inflation Instructions

To adjust the air, moisten the needle tip and twists into valve: pump desired air amount in. When complete twist needle pin out. DO NOT STAB the needle into the valve as this will cause damage to the valve that is not covered under warranty.